


S21

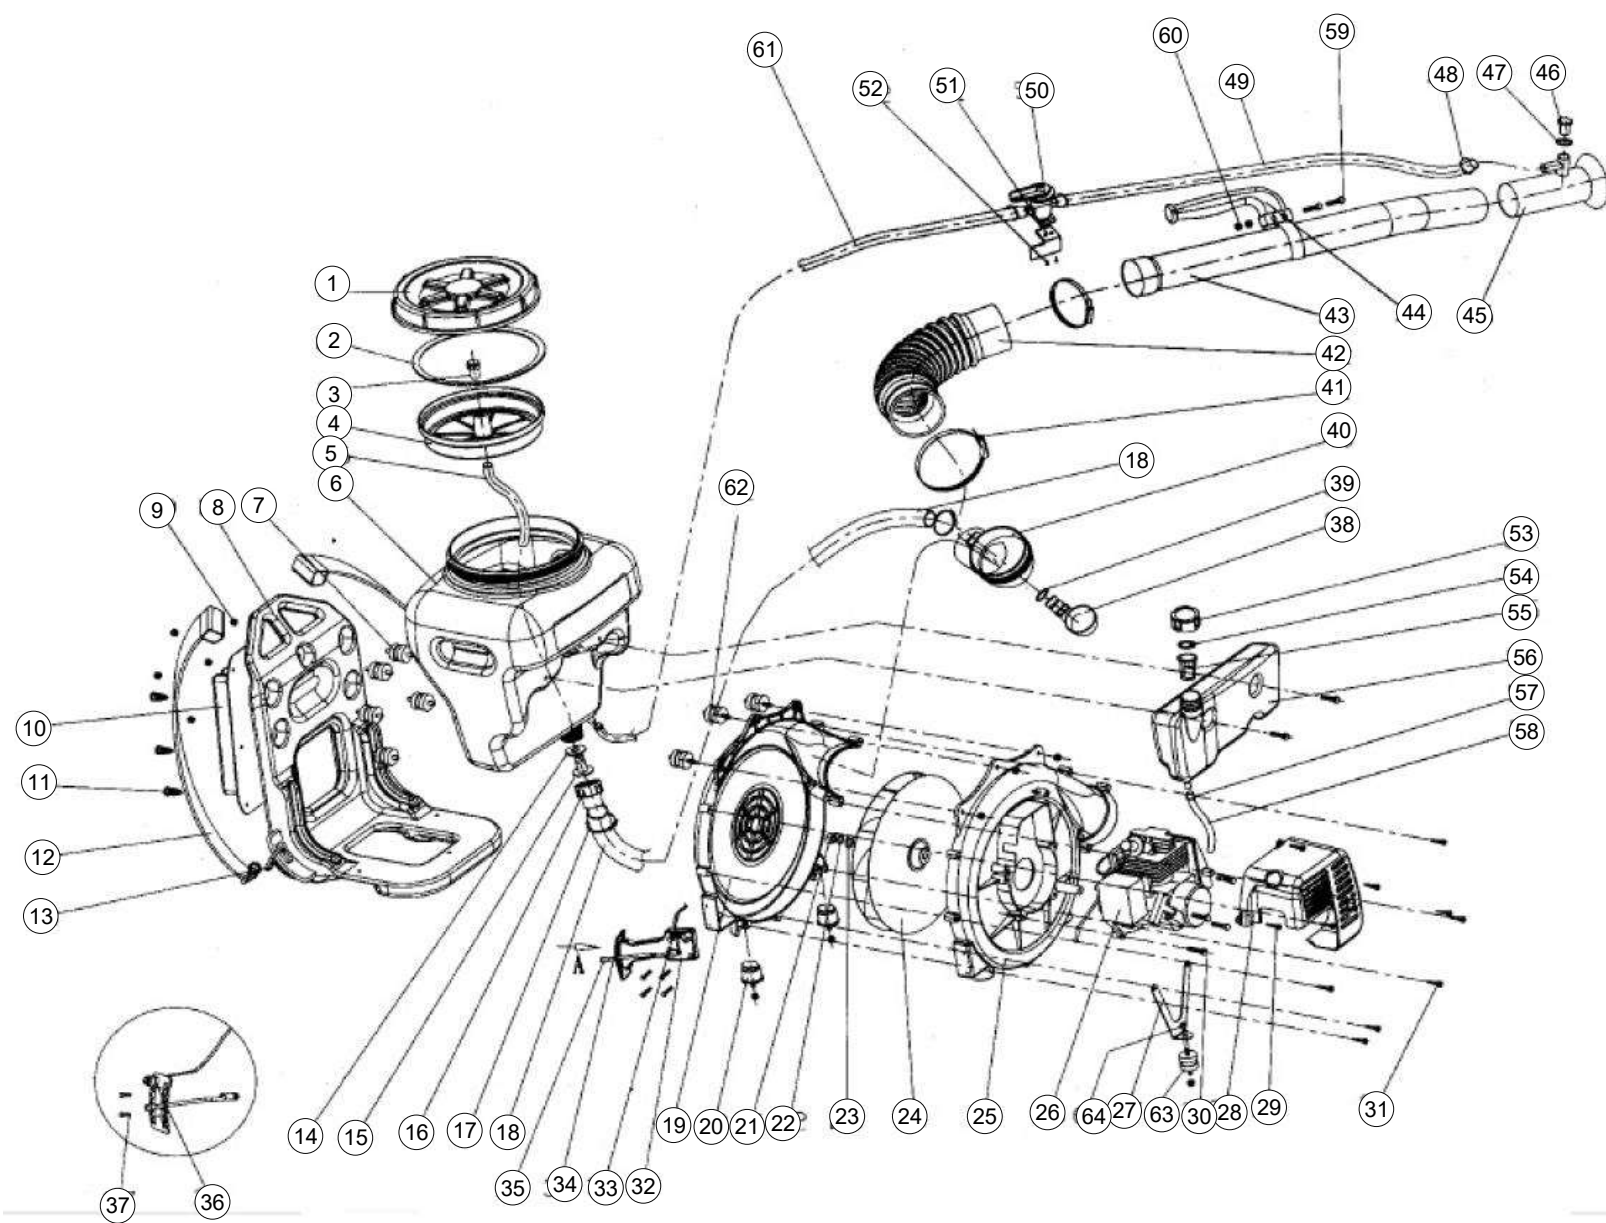




| Pos | Code          | Description    | NOTE | Q. |
|-----|---------------|----------------|------|----|
| 1   | S21.100.00.01 | LID            |      | 1  |
| 2   | S21.100.00.02 | SEALING WASHER |      | 1  |
| 3   | S21.100.00.03 | CAP            |      | 1  |
| 4   | S21.100.00.04 | CLEANER        |      | 1  |
| 5   | S21.100.00.05 | INLET PIPE     |      | 1  |
| 6   | S21.100.00.06 | TANK           |      | 1  |
| 7   | S21.100.00.07 | RUBBER PILLAR  |      | 1  |
| 8   | S21.100.00.08 | BEARING        |      | 1  |
| 9   | S21.100.00.09 | NUT M6         |      | 11 |
| 10  | S21.100.00.10 | BACK MAT       |      | 1  |
| 11  | S21.100.00.11 | PLASTIC CLIP   |      | 1  |
| 12  | S21.100.00.12 | BELT           |      | 1  |
| 13  | S21.100.00.13 | LOOP           |      | 2  |
| 14  | S21.100.00.14 | AIR VALVE      |      | 2  |
| 15  | S21.100.00.15 | AIR VALVE      |      | 1  |
| 16  | S21.100.00.16 | CAP            |      | 1  |
| 17  | S21.100.00.17 | CLIP           |      | 2  |
| 18  | S21.100.00.18 | AIR INLET PIPE |      | 1  |
| 19  | S21.100.00.19 | BACK COVER     |      | 1  |
| 20  | S21.100.00.20 | SUPPORT        |      | 2  |
| 21  | S21.100.00.21 | NUT M12        |      | 1  |
| 22  | S21.100.00.22 | SPRING WASHER  |      | 1  |
| 23  | S21.100.00.23 | FLAT GASKET    |      | 1  |
| 24  | S21.100.00.24 | IMPELLER       |      | 1  |
| 25  | S21.100.00.25 | VOLUTE CASE    |      | 0  |

| Pos | Code          | Description     | NOTE | Q. |
|-----|---------------|-----------------|------|----|
| 26  | S21.100.00.26 | GASOLINE ENGINE |      | 1  |
| 27  | S21.100.00.27 | SUPPORT         |      | 1  |
| 28  | S21.100.00.28 | COVER           |      | 1  |
| 29  | S21.100.00.29 | SCREW M5x16     |      | 3  |
| 30  | S21.100.00.30 | SCREW M6x30     |      | 4  |
| 31  | S21.100.00.31 | SCREW M6x30     |      | 10 |
| 32  | S21.100.00.32 | BEAM            |      | 1  |
| 33  | S21.100.00.33 | CABLE COMP      |      | 1  |
| 34  | S21.100.00.34 | REGULATOR VALVE |      | 1  |
| 35  | S21.100.00.35 | HANDLE          |      | 1  |
| 36  | S21.100.00.36 | BUTTON COMP     |      | 1  |
| 37  | S21.100.00.37 | SCREW M5x12     |      | 2  |
| 38  | S21.100.00.38 | RUBBER PIPE     |      | 1  |
| 39  | S21.100.00.39 | O - RING        |      | 1  |
| 40  | S21.100.00.40 | ELBOW PIPE      |      | 1  |
| 41  | S21.100.00.41 | BIG CLIP        |      | 2  |
| 42  | S21.100.00.42 | HOSE            |      | 1  |
| 43  | S21.100.00.43 | LONG PIPE       |      | 1  |
| 44  | S21.100.00.44 | HANDLE          |      | 1  |
| 45  | S21.100.00.45 | NOZZLE ASSY     |      | 1  |
| 46  | S21.100.00.46 | REGULATOR VALVE |      | 1  |
| 47  | S21.100.00.47 | O - RING        |      | 1  |
| 48  | S21.100.00.48 | SMALL CLIP      |      | 1  |
| 49  | S21.100.00.49 | PLASTIC PIPE    |      | 1  |
| 50  | S21.100.00.50 | COCK ASSEM      |      | 1  |

| Pos | Code          | Description   | NOTE | Q. |
|-----|---------------|---------------|------|----|
| 51  | S21.100.00.51 | SUPPORT       |      | 1  |
| 52  | S21.100.00.52 | SCREW M4x16   |      | 1  |
| 53  | S21.100.00.53 | TANK LID      |      | 1  |
| 54  | S21.100.00.54 | GASKET        |      | 1  |
| 55  | S21.100.00.55 | FILTER NET    |      | 1  |
| 56  | S21.100.00.56 | FUELTANK      |      | 1  |
| 57  | S21.100.00.57 | CLIP          |      | 1  |
| 58  | S21.100.00.58 | FEED TANK     |      | 1  |
| 59  | S21.100.00.59 | SCREW M5x20   |      | 2  |
| 60  | S21.100.00.60 | NET M5        |      | 2  |
| 61  | S21.100.00.61 | PLASTIC PIPE  |      | 1  |
| 62  | S21.100.00.62 | RUBBER PILLAR |      | 1  |
| 63  | S21.100.00.63 | RUNNER PILLAR |      | 1  |
| 64  | S21.100.00.64 | SCREW M6X40   |      | 1  |

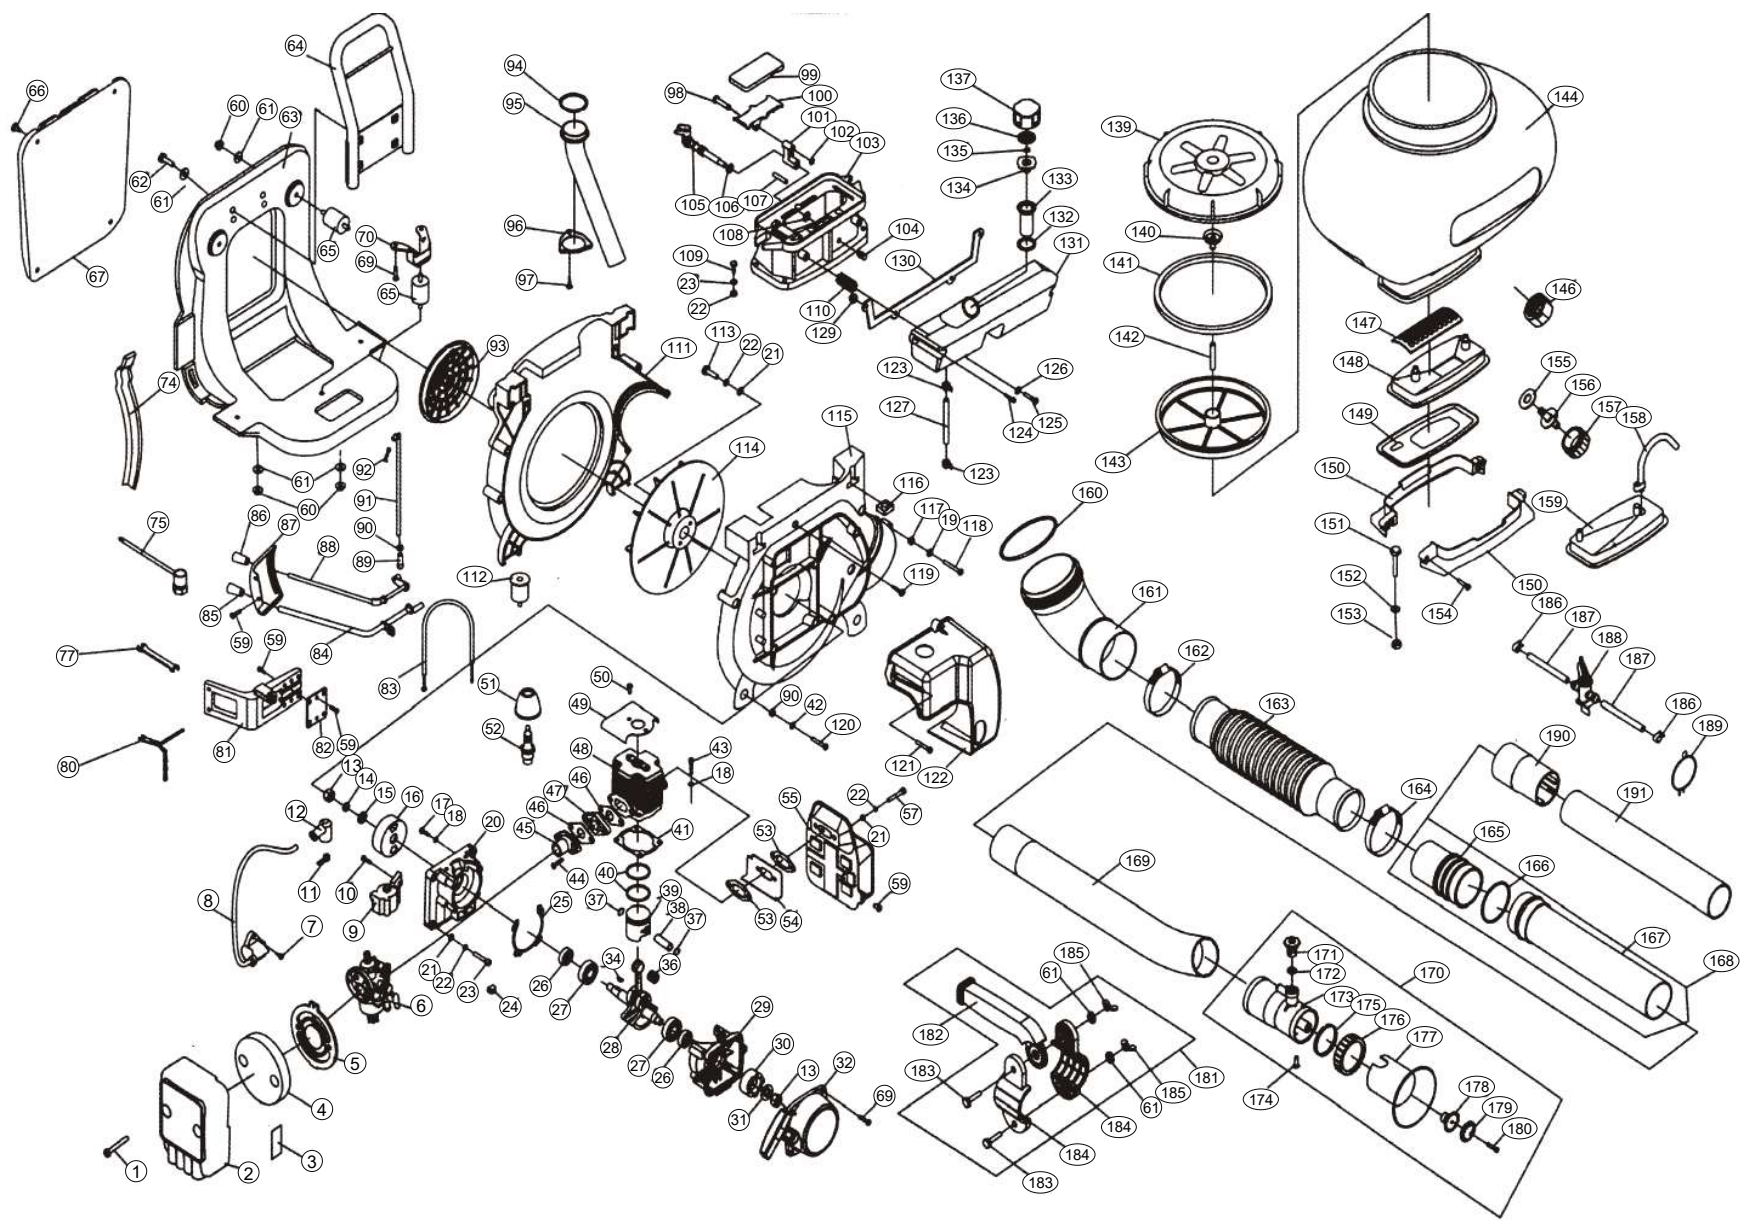

| Pos | Code             | Description     | NOTE | Q. |
|-----|------------------|-----------------|------|----|
| 1   | GB/T9074.4.M4x25 | Screw assem     |      | 2  |
| 2   | 1E40F-3A.T2-1    | Outside cover   |      | 1  |
| 3   | 1E40F-3A.3-5     | Sign            |      | 1  |
| 4   | 1E36F.16-2       | Filter          |      | 1  |
| 5   | 1E40F-3A.T2-2    | Black plate     |      | 1  |
| 6   | 1E40FP-3Z.1      | Carburetor      |      | 1  |
| 7   | GB/T845.ST4.2x16 | Screw           |      | 2  |
| 8   | 1E40FP-3Z.5      | Widing          |      | 1  |
| 9   | 1E40FP-3Z.5      | Widing          |      | 1  |
| 10  | GB/T9074.4.M4x20 | Screw assem     |      | 2  |
| 11  | 1E40FP-3Z-22     | Spring          |      | 1  |
| 12  | 1E40FP-3Z-21     | Cap             |      | 1  |
| 13  | 1E40FP-3Z-16     | M10x1 / nut     |      | 2  |
| 14  | GB/T859.10       | Washer          |      | 1  |
| 15  | GB/T848.10       | Washer          |      | 1  |
| 16  | 1E40FP-3Z.5      | Widing          |      | 1  |
| 17  | GB/T70.1.M5x30   | Screw           |      | 4  |
| 18  | GB/T93.5         | Washer          |      | 8  |
| 19  | GB/T97.1.5       | Washer          |      | 2  |
| 20  | 1E4FP-3Z-14      | Front crankcase |      | 1  |
| 21  | GB/T97.1.6       | Plain washer 6  |      | 9  |
| 22  | GB/T93.6         | Washer          |      | 8  |
| 23  | GB/T70.1.M6x30   | Screw           |      | 4  |
| 24  | 1E40FP-3Z-20     | Fixity          |      | 1  |
| 25  | 1E40FP-3Z-13     | Sealing washer  |      | 1  |

| Pos | Code             | Description    | NOTE | Q. |
|-----|------------------|----------------|------|----|
| 26  | 1E40FP-3Z-11     | Seal           |      | 2  |
| 27  | GB/T276.6202/P6  | Bearing        |      | 2  |
| 28  | 1E40FP-3Z.3A.1   | Crankshaft     |      | 1  |
| 29  | 1E40FP-3Z-12     | Back crankcase |      | 1  |
| 30  | 1E40FP-3Z-19     | Ratchet        |      | 1  |
| 31  | GB/T97.1.10      | Washer         |      | 1  |
| 32  | 1E40FP-3Z.4      | Starter        |      | 1  |
| 34  | 1E40FP-3Z.3-1    | Key            |      | 1  |
| 36  | 1E40FP-3Z.3A.2   | Bearing        |      | 1  |
| 37  | 1E40FP-3Z.3-4    | Ring           |      | 2  |
| 38  | 1E40FP-3Z.3-3    | Piston pin     |      | 1  |
| 39  | 1E40FP-3Z.3-2    | Piston         |      | 1  |
| 40  | 1E40FP-3Z.3-5    | Piston ring    |      | 2  |
| 41  | 1E40FP-3Z-6      | Sealing washer |      | 1  |
| 42  | GB/T848.5        | Washer         |      | 9  |
| 43  | GB/T70.1.M5x20   | Screw          |      | 4  |
| 44  | GB/T9074.4.M5x25 | Screw assem    |      | 2  |
| 45  | 1E40FP-3Z-2      | Flange         |      | 1  |
| 46  | 1E40FP-3Z-4      | Gasket         |      | 2  |
| 47  | 1E40FP-3Z-3      | Insulator      |      | 1  |
| 48  | 1E40FP-3Z-7      | Cylinder       |      | 1  |
| 49  | 1E40FP-3Z-8      | Cover          |      | 1  |
| 50  | GB/T9074.4.M5x10 | Screw assem    |      | 2  |
| 51  | 1E40FP-3Z-9      | Cap            |      | 1  |
| 52  | 4106J            | Spark Plug     |      | 1  |

| Pos | Code                | Description     | NOTE | Q. |
|-----|---------------------|-----------------|------|----|
| 53  | 1E40FP-3Z-18        | Gasket          |      | 2  |
| 54  | 1E40FP-3Z-5         | Gasket          |      | 1  |
| 55  | 1E40FP-3Z.2         | Muffle          |      | 1  |
| 57  | GB/T70.1.M6x35-10.9 | Screw           |      | 2  |
| 59  | GB/T9074.4.M5x12    | Screw assem     |      | 9  |
| 60  | GB/T6177.1.M6       | Nut             |      | 5  |
| 61  | GB/T96.6            | Washer          |      | 11 |
| 62  | GB/T29.2.M6x16      | Screw           |      | 4  |
| 63  | EB-415.16-1         | Frame           |      | 1  |
| 64  | 3WF-3.9             | Belt frame      |      | 1  |
| 65  | 3WF-2.6A.6          | Rubber pillar   |      | 3  |
| 66  | 3WF-2.6B-2          | Nylon clip      |      | 7  |
| 67  | 3WF-W.11            | Back mat        |      | 1  |
| 69  | GB/T9074.4.M5x16    | Screw assem     |      | 6  |
| 70  | 3WF-3A.3            | Support         |      | 1  |
| 74  | 3WF-28.7            | Belt component  |      | 2  |
| 75  | 3WF-3.26.3          | Spanner         |      | 1  |
| 77  | QGZ40-35.12-5       | Spanner         |      | 1  |
| 80  | 3WF-3.25.4          | Insurance chain |      | 1  |
| 81  | 3WF-3.2             | Support frame   |      | 1  |
| 82  | 3WF-3-16            | Plate           |      | 1  |
| 83  | 3WF-3.25.1          | Throttle rope   |      | 1  |
| 84  | 3WF-3.4             | Throttle rod    |      | 1  |
| 85  | 3WF-3-5(red)        | Handle          |      | 1  |
| 86  | 3WF-3-5(black)      | Handle          |      | 1  |

| Pos | Code              | Description       | NOTE | Q. |
|-----|-------------------|-------------------|------|----|
| 87  | 3WF-3-4           | Graduator         |      | 1  |
| 88  | 3WF-3.3           | Dust rod          |      | 1  |
| 89  | 3WF-3-15          | Connector         |      | 1  |
| 90  | GB/T6170.M5       | Nut M5            |      | 1  |
| 91  | 3WF-3-12          | Pulling rod       |      | 1  |
| 92  | 3WF-2.6.6-1       | Pipe              |      | 1  |
| 93  | 3WF-3-14          | Net cover         |      | 1  |
| 94  | 3WF-3-9           | Washer            |      | 1  |
| 95  | 3WF-2.6.6-1       | Pipe              |      | 1  |
| 96  | 3WF-3-8           | Lid               |      | 1  |
| 97  | GB/T845.ST4.2x13  | Screw             |      | 3  |
| 98  | 3WF-3.6-3         | Pin               |      | 1  |
| 99  | 3WF-3.6-2         | Rubber plate      |      | 1  |
| 100 | 3WF-3.6-1         | Slide             |      | 1  |
| 101 | 3WF-3.6-4         | Support arm       |      | 1  |
| 102 | GB/T896.5         | Ring              |      | 1  |
| 103 | 3WF-3.1           | Shutter           |      | 1  |
| 104 | 3WF-3-21          | Plug              |      | 1  |
| 105 | 3WF-3-22          | Rocker shaft      |      | 1  |
| 106 | GB1235.14x2.4     | Sealing washer    |      | 1  |
| 107 | 3WF-2.6.6-3       | Pin               |      | 1  |
| 108 | GB/T896.9         | Ring              |      | 1  |
| 109 | GB/T9074.13.M6x40 | Bolt              |      | 4  |
| 110 | 3WF-3-23          | Fuel tank support |      | 2  |
| 111 | 3WF-3.13          | Volute case       |      | 1  |

| Pos | Code                | Description    | NOTE | Q. |
|-----|---------------------|----------------|------|----|
| 112 | 3WF-3.5             | Rubber pillar  |      | 2  |
| 113 | GB/T5783.M6x35      | Bolt           |      | 2  |
| 114 | 3WF-3-13            | Impeller       |      | 1  |
| 115 | 3WF-3.14            | Volute case    |      | 1  |
| 116 | 3WF-3-2             | Nut            |      | 4  |
| 117 | GB/T889.1.M5        | Nut            |      | 2  |
| 118 | 3WF-3-10            | Long screw     |      | 2  |
| 119 | GB/T845.ST4.8x25    | Screw          |      | 1  |
| 120 | GB/T818.M5x30       | Screw          |      | 9  |
| 121 | GB/T9074.4.M5x25    | Screw assem    |      | 4  |
| 122 | 3WF-3-19            | Protection     |      | 1  |
| 123 | 3WF-3-3             | Clip           |      | 2  |
| 124 | GB/T818.M5x16       | Screw          |      | 2  |
| 125 | GB/T818.M5x55       | Screw          |      | 2  |
| 126 | GB/T96.5            | Washer         |      | 4  |
| 127 | GB/T13527.1.8x2x340 | Tube           |      | 1  |
| 129 | GB/T6177.1.M5       | Nut            |      | 2  |
| 130 | 3WF-2.6-3           | Support frame  |      | 1  |
| 131 | 3WF-2.6.2-1         | Fuel tank      |      | 1  |
| 132 | BG305.10-2          | Sealing washer |      | 1  |
| 133 | BG305.10.1          | Filter         |      | 1  |
| 134 | BG305.10.2-2        | Rubber lid     |      | 1  |
| 135 | BG-328.7-4          | Filter net     |      | 1  |
| 136 | BG305.10.2-3        | Plastic lid    |      | 1  |
| 137 | BG305.10.2-1        | Fuel tank lid  |      | 1  |

| Pos | Code                 | Description    | NOTE | Q. |
|-----|----------------------|----------------|------|----|
| 139 | 3WF-3.17.1-2         | Lid            |      | 1  |
| 140 | 3WF-3.17.1-1         | Air valve      |      | 1  |
| 141 | 3WF-3.17.1-3         | Sealing washer |      | 1  |
| 142 | GB/T13527.1.8x3x500  | Tube           |      | 1  |
| 143 | 3WF-3.20.1           | Filter         |      | 1  |
| 144 | 3WF-3.17-1A          | Chemical tank  |      | 1  |
| 146 | 3WF-3.17.2-1         | Lid            |      | 1  |
| 147 | 3WF-2.6A.1-2         | Plate          |      | 1  |
| 148 | 3WF-3.7-2            | Dusting plate  |      | 1  |
| 149 | 3WF-3.7-1            | Sealing washer |      | 1  |
| 150 | 3WF-3-1              | Clamp          |      | 2  |
| 152 | GB/T96.8             | Washer         |      | 2  |
| 153 | GB/T.5782-2000-M8x40 | Bolt M8X40     |      | 1  |
| 153 | GB/T6170.M8          | Nut            |      | 2  |
| 154 | GB/T9074.4.M6x25     | Screw assem    |      | 2  |
| 155 | 3WF-3.17.2-2         | Scaling washer |      | 1  |
| 156 | 3WF-3.20.2-2         | Link pipe      |      | 1  |
| 157 | 3WF-3.20.2-1         | Connector lid  |      | 1  |
| 158 | 3WF-3.20-1           | Tube           |      | 1  |
| 159 | 3WF-3.20-2           | Misting plate  |      | 1  |
| 160 | GB1235.100X3.1       | Sealing washer |      | 1  |
| 161 | 3WF-3-6              | Bend pipe      |      | 1  |
| 162 | Ø78-Ø101             | Clip           |      | 1  |
| 163 | 3WF-3.19-4           | Hose           |      | 1  |
| 164 | Ø59-Ø82              | Clip           |      | 1  |

| Pos | Code               | Description     | NOTE | Q. |
|-----|--------------------|-----------------|------|----|
| 165 | 3WF-3.19.2-1       | Connector       |      | 1  |
| 166 | GB1235.65x3.1      | Sealing washer  |      | 1  |
| 167 | 3WF-3.19.2-2       | Pipe            |      | 1  |
| 168 | 3WF-3.19.2         | Connector assem |      | 1  |
| 169 | 3WF-3.19.3         | Long bend pipe  |      | 1  |
| 170 | 3WF-3.19.3         | Nozzle assem    |      | 1  |
| 171 | 3WF-3.19.3-3       | Valve           |      | 1  |
| 172 | GB1235.16x2.4      | Sealing washer  |      | 1  |
| 173 | 3WF-3.19.3-4       | Shot pipe       |      | 1  |
| 174 | GB/T818.M5x12      | Screw           |      | 1  |
| 175 | 3WF-3.19.3-1       | Sealing washer  |      | 1  |
| 176 | 3WF-3.19.3-2       | Lid             |      | 1  |
| 177 | 3WF-3.19.3-5       | Nozzle          |      | 1  |
| 178 | 3WF-3.19.3.1-2     | Nozzle piece    |      | 1  |
| 179 | 3WF-3.19.3.1-1     | Nozzle piece    |      | 1  |
| 180 | GB/T846.ST2.9X16   | Screw           |      | 1  |
| 181 | 3WF-3.19.6         | Handle assem    |      | 1  |
| 182 | 3WF-3.19.6-1       | Handle          |      | 1  |
| 183 | GB/T5781.M6x30     | Bolt            |      | 2  |
| 184 | 3WF-3.19.6-2       | Clamp           |      | 2  |
| 185 | GB/T62             | Nut             |      | 2  |
| 186 | 3WF-3.19-1         | Clip            |      | 4  |
| 187 | GB/T13527.1.10x830 | Tube            |      | 2  |
| 188 | 3WF-3.19.1         | Cock assem      |      | 1  |
| 189 | 3WF-3.19-2         | Clamp           |      | 1  |

| Pos | Code       | Description  | NOTE | Q. |
|-----|------------|--------------|------|----|
| 190 | 3WF-3.21-1 | Guide pipe   |      | 1  |
| 191 | 3WF-3.21-2 | Connect pipe |      | 1  |