



ECO 16H



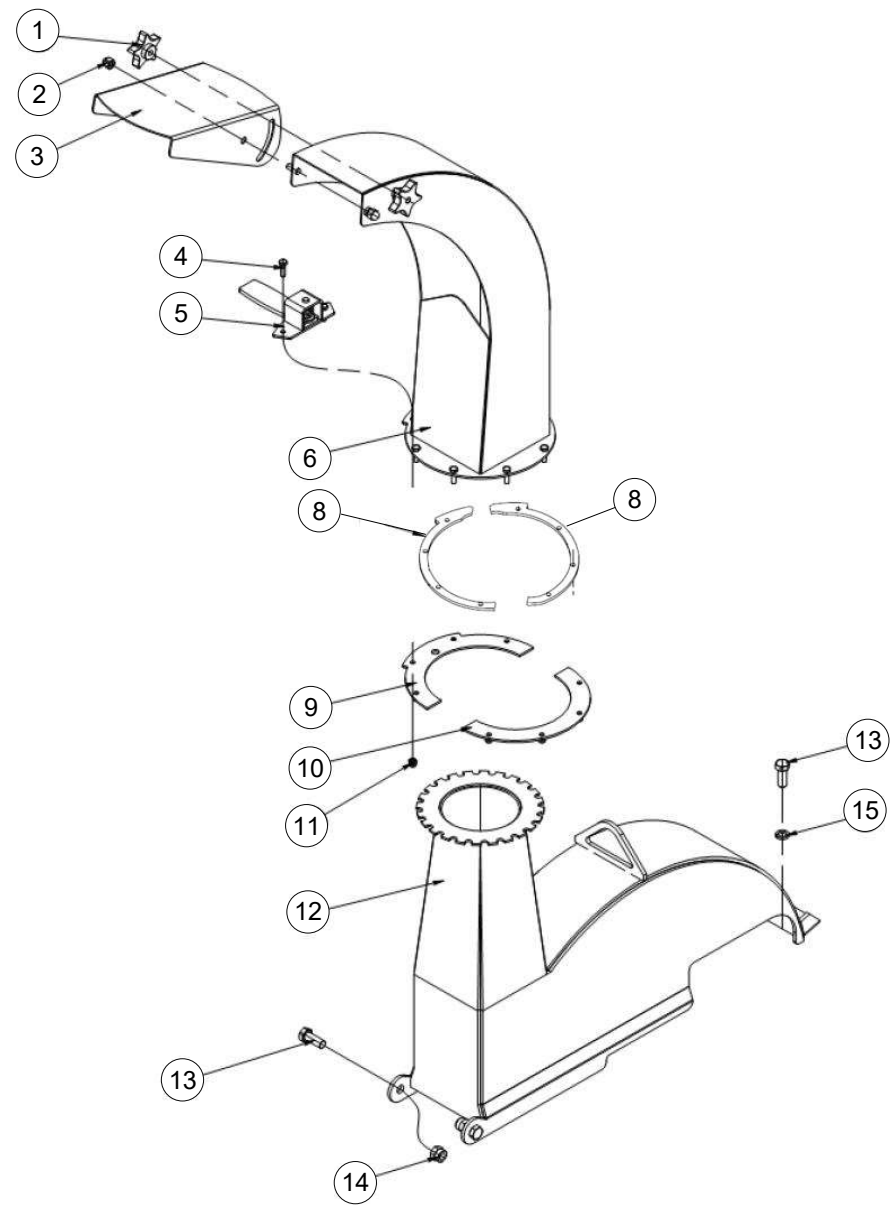


Pos	Code	Description	NOTE	Q.
1	Z19313	Knob		2
2	GB/T802-88	Acorn Nut M8		2
3	1011L133	Deflector- Discharge Chute		0
4	GB/T5783-2000-M6x20	Bolt M6x20		9
5	1012W208	Assembly- Hood Latch		1
6	1011W106	Discharge Chute		1
8	1011L127	Plate- Spacer Ring		0
9	1011L134	Plate- Hood Capture		0
10	1011L130	Plate- Hood Capture		0
11	GB/T889.1-2000-6	Locking Nut M6		13
12	BX42F.015	Housing- Upper Rotor		0
13	GB/T5783-2000-M12x30	Bolt M12x30		7
14	GB/T889.1-2000-M12	Locknut M12		10
15	GB/T93-1987-12	Spring washer 12		1

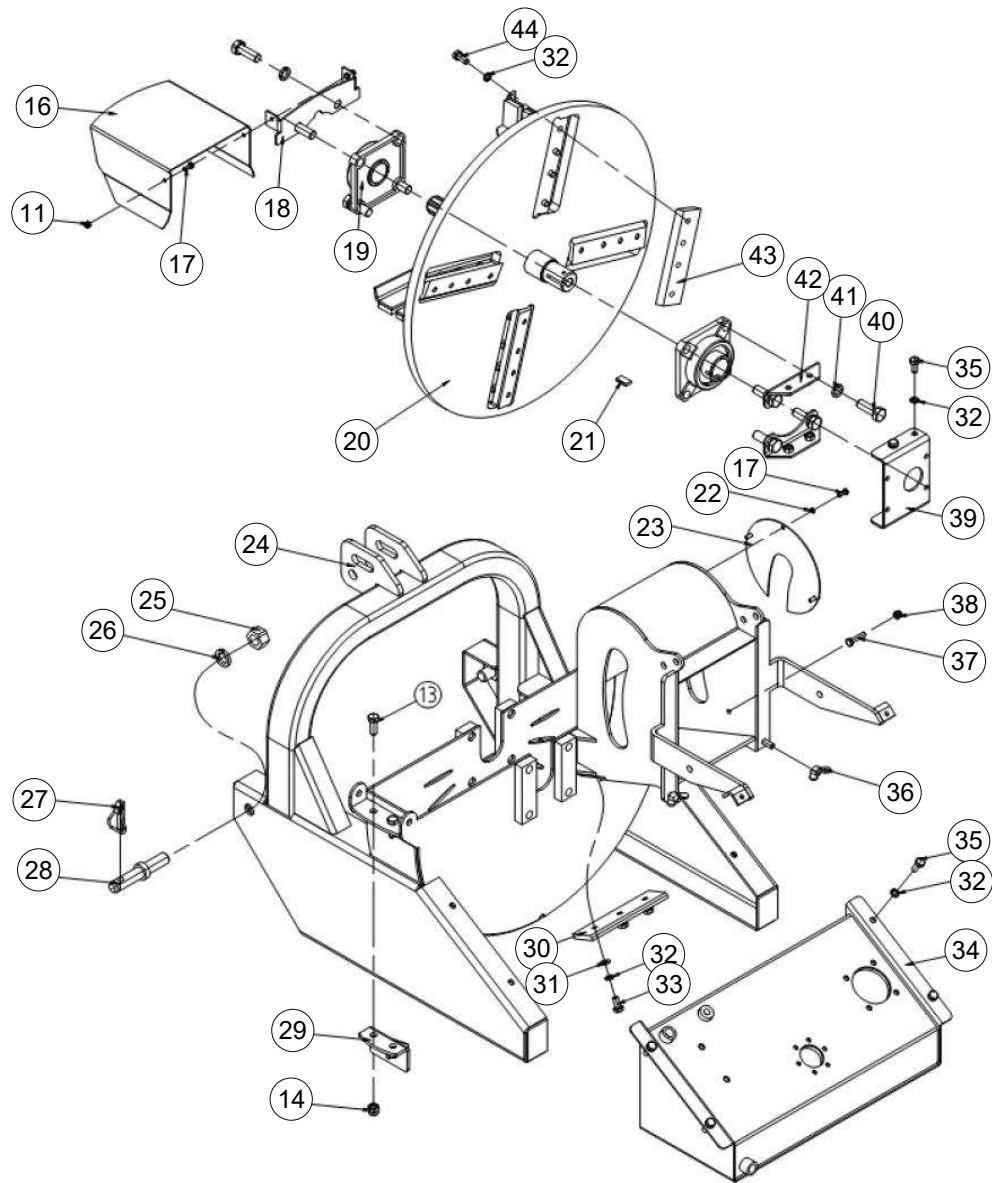


Pos	Code	Description	NOTE	Q.
11	GB/T889.1-2000-6	Locking Nut M6		1
14	GB/T889.1-2000-M12	Locknut M12		1
16	1011L112	PTO Cover		1
17	GB/T5783-2000-M6x16	Bolt M6*16		8
18	1011L106	Bracket- PTO Cover Mount		0
19	GB/T7810-1995-UCFU208	Bearing UCFU208		2
20	BX42F.016	Rotor		1
21	BX42F.110	Flat key		1
22	GB/T93-1987-6	Spring washer 6		12
23	BX42F.105	Circular plate		1
24	BX42F.013	Housing- Bottom Rotor		0
25	GB/T6171-86-M22x1.5	Nut M22x1.5		2
26	GB/T93-1987-22	Spring washer 22		2
27	LPIN.12	Lock Pin 12		2
28	Z11431	Implement Pin		2
29	1011W104	Twig Breaker		1
30	BX42F.104	Knife- Ledger		0
31	GB/T97.1-2002-10	Plain washer 10		3
32	GB/T93-1987-10	Spring washer 10		0
33	GB/T5786-86-M10x1x25	Bolt M10x1x25		3
34	BX42F.014	Oil tank weldment		1
35	GB/T5783-2000-M10x25	Bolt M10x25		13
36	GB/T62-88	Wing Nut M10		2
37	GB/T5783-2000-M8x35	Bolt M8*35		5
38	GB/T889.1-2000-8	Locking nut M8		13


Pos	Code	Description	NOTE	Q.
39	BX42F.107	The plate fix the pump		1
40	GB/T5786-86-M16x45	Bolt M16x1.5x45		8
41	GB/T889.1-2000-16	Locking Nut M16		8
42	BX42F.020	Connection plate		1
43	BX42F.106	Knife- Rotor		0
44	GB/T5786-86-M10x1x30	Bolt M10x1x30		16

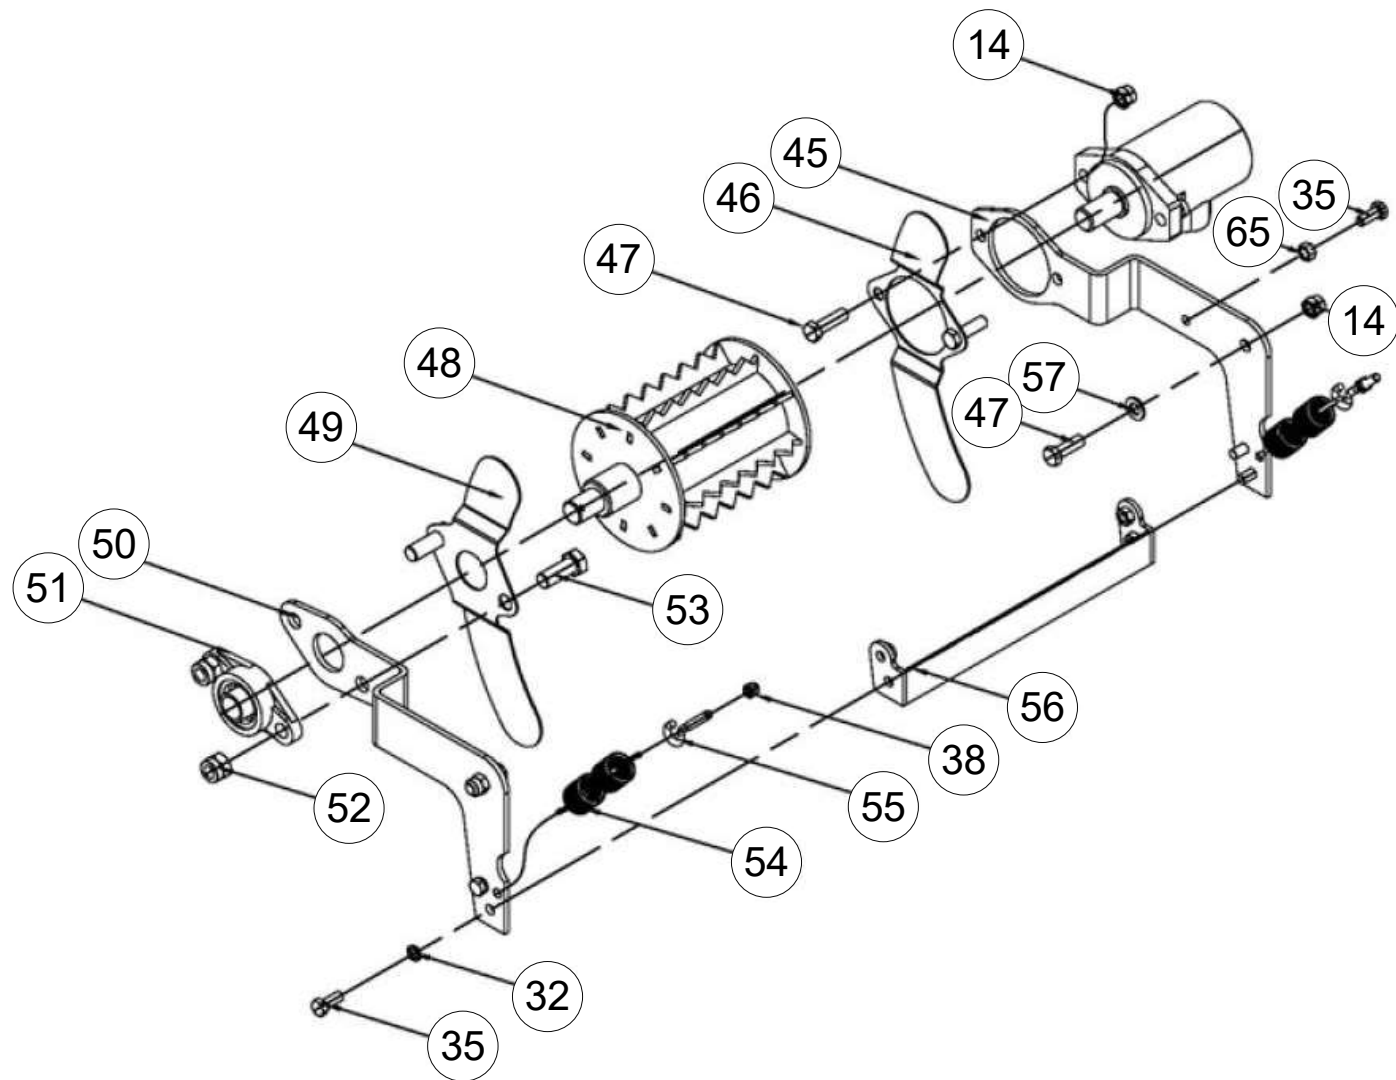

Pos	Code	Description	NOTE	Q.
14	GB/T889.1-2000-M12	Locknut M12		1
32	GB/T93-1987-10	Spring washer 10		1
35	GB/T5783-2000-M10x25	Bolt M10x25		1
38	GB/T889.1-2000-8	Locking nut M8		1
45	BX42F.102	Roller Arm-Right		1
46	BX42F.103	Right turn plate		1
47	GB/T5783-2000-M12x40	Bolt M12x40		4
48	BX42F.017	Drum- Feed Roller		0
49	BX42F.108	Left turn plate		1
50	BX42F.109	Roller Arm-Left		1
51	GB/T7810-UCFLU205	BEARING UCFLU205		1
52	GB/T5783-2000-M16x40	Bolt M16*40		2
53	GB/T889.1-2000-16	Locking Nut M16		2
54	BX42F.101	Spring		2
55	BX42F.010	Eye Bolt		2
56	BX42F.018	Pull plate		1
57	GB/T97.1-2002-12	Plain washer 12		2
65	GB/T6170-2000-M10	Nut M10		1

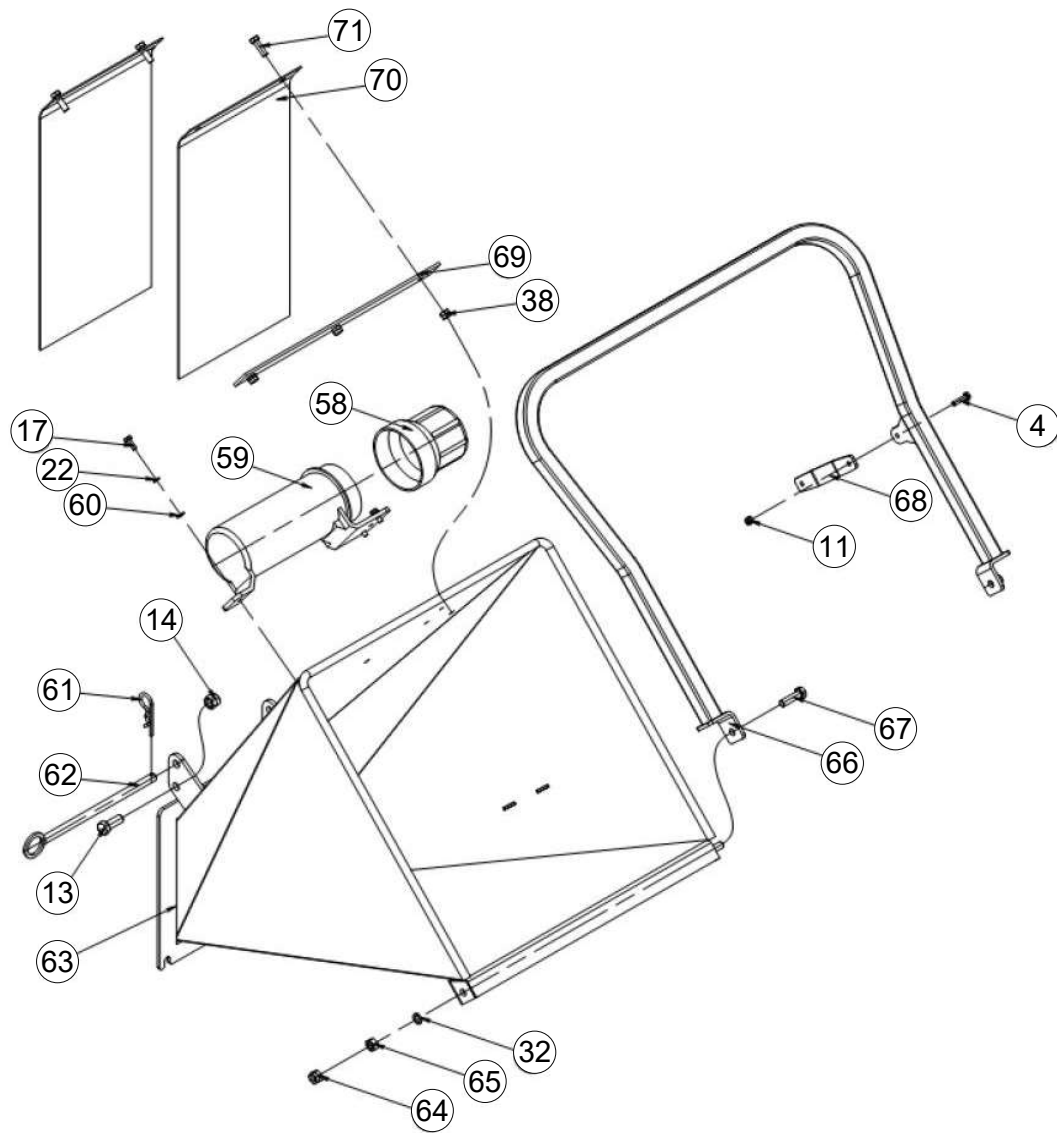

Pos	Code	Description	NOTE	Q.
4	GB/T5783-2000-M6x20	Bolt M6x20		1
11	GB/T889.1-2000-6	Locking Nut M6		1
13	GB/T5783-2000-M12x30	Bolt M12x30		1
14	GB/T889.1-2000-M12	Locknut M12		1
17	GB/T5783-2000-M6x16	Bolt M6*16		1
22	GB/T93-1987-6	Spring washer 6		1
32	GB/T93-1987-12	Spring washer 12		1
38	GB/T889.1-2000-8	Locking nut M8		1
58	BX42F.111	Manual tube cover		1
59	BX42F.112	Manual tube		1
60	GB/T97.1-2002-6	Plain washer 6		3
61	RPIN.3.2	R Pin 3.2		1
62	BX42F.019	Pin weldment		1
63	BX42F.012	Weldment- Main Hopper		0
64	GB/T889.1-2000-M10	Locking nut M10		2
65	GB/T6170-2000-M10	Nut M10		3
66	BX42F.011	Feed Handle		1
67	GB/T5783-2000-M10x35	Bolt M10x35		2
68	1014L413	Feed Handle Link Bar		1
69	1011L151	Safety Flap Bar		1
70	1012S203	Flap- Hopper		0
71	GB/T5783-2000-M8x25	Bolt M8x25		3

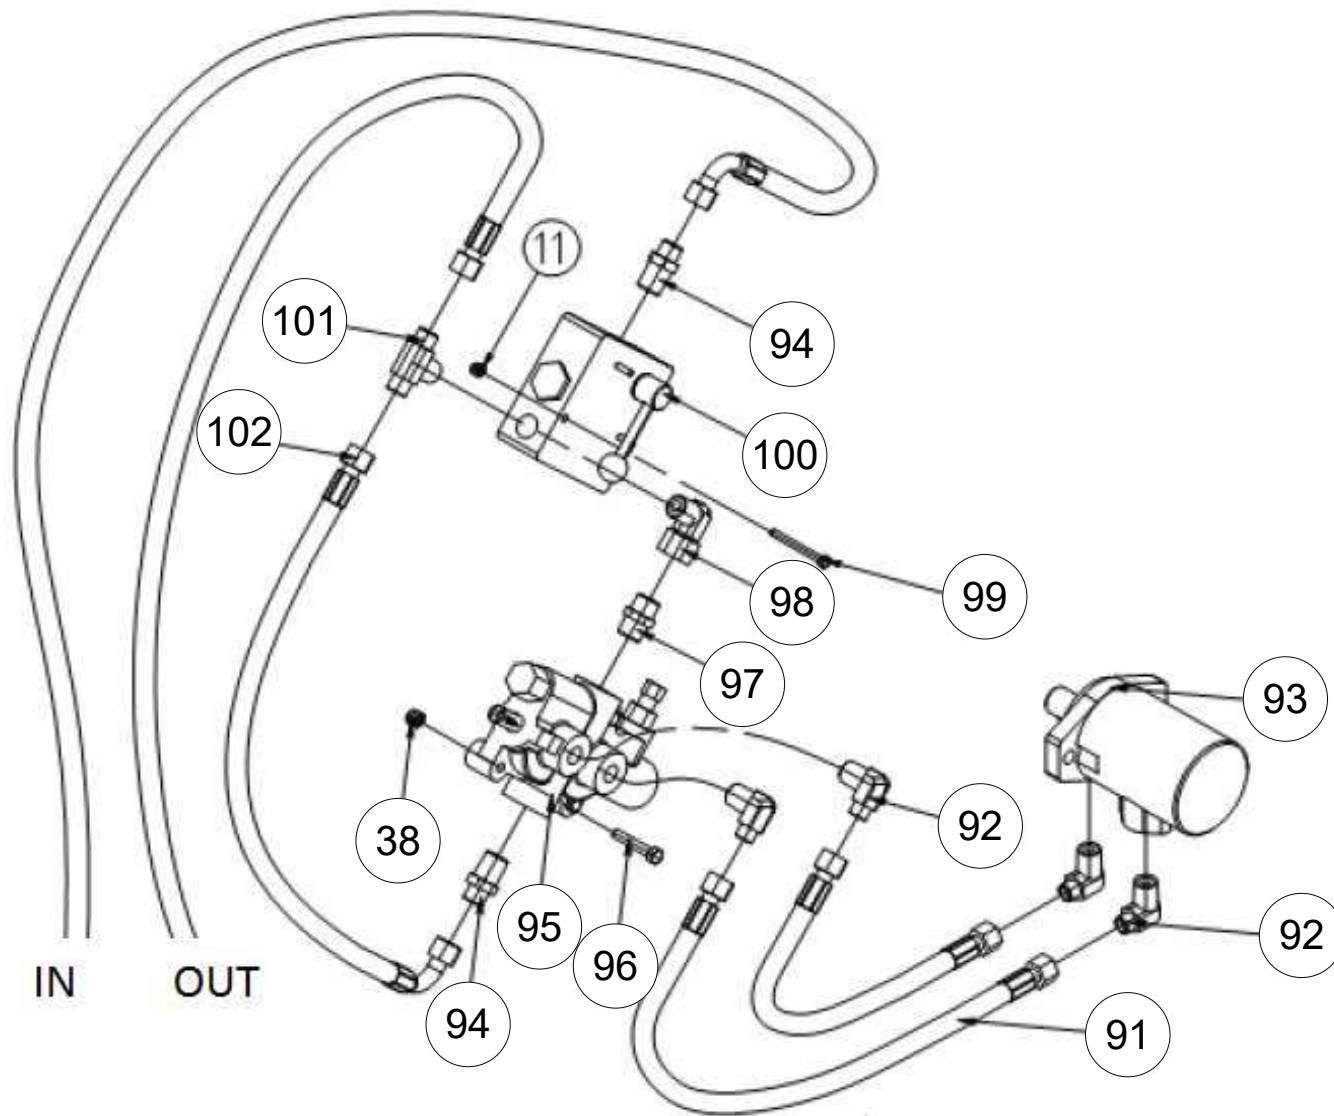

Pos	Code	Description	NOTE	Q.
38	GB/T889.1-2000-8	Locking nut M8		1
91	BX42F.025	Hose- Valve- Motor		0
92	CP5.60.108	Adapter- Elbow		0
93	BMP-200	Motor bmp-200		1
94	CP5.60.104	Adapter R1/2-M18*1.5		2
95	X-20-1	CONTROL VALVE X-20-1		0
96	GB/T5782-2000-M8x45	Bolt M8x45		3
97	CP5.60.107	Adapter- Valve-Valve		0
98	CP5.60.106	Bend adapter		1
99	GB/T5782-2000-M6x60	Bolt M6x60		2
100	RD1900	Hydraulic Flow Control		1
101	CP5.60.105	Adapter- Tee		0
102	BX42F.021	Hose- Valve- Valve		0