



ECO 33



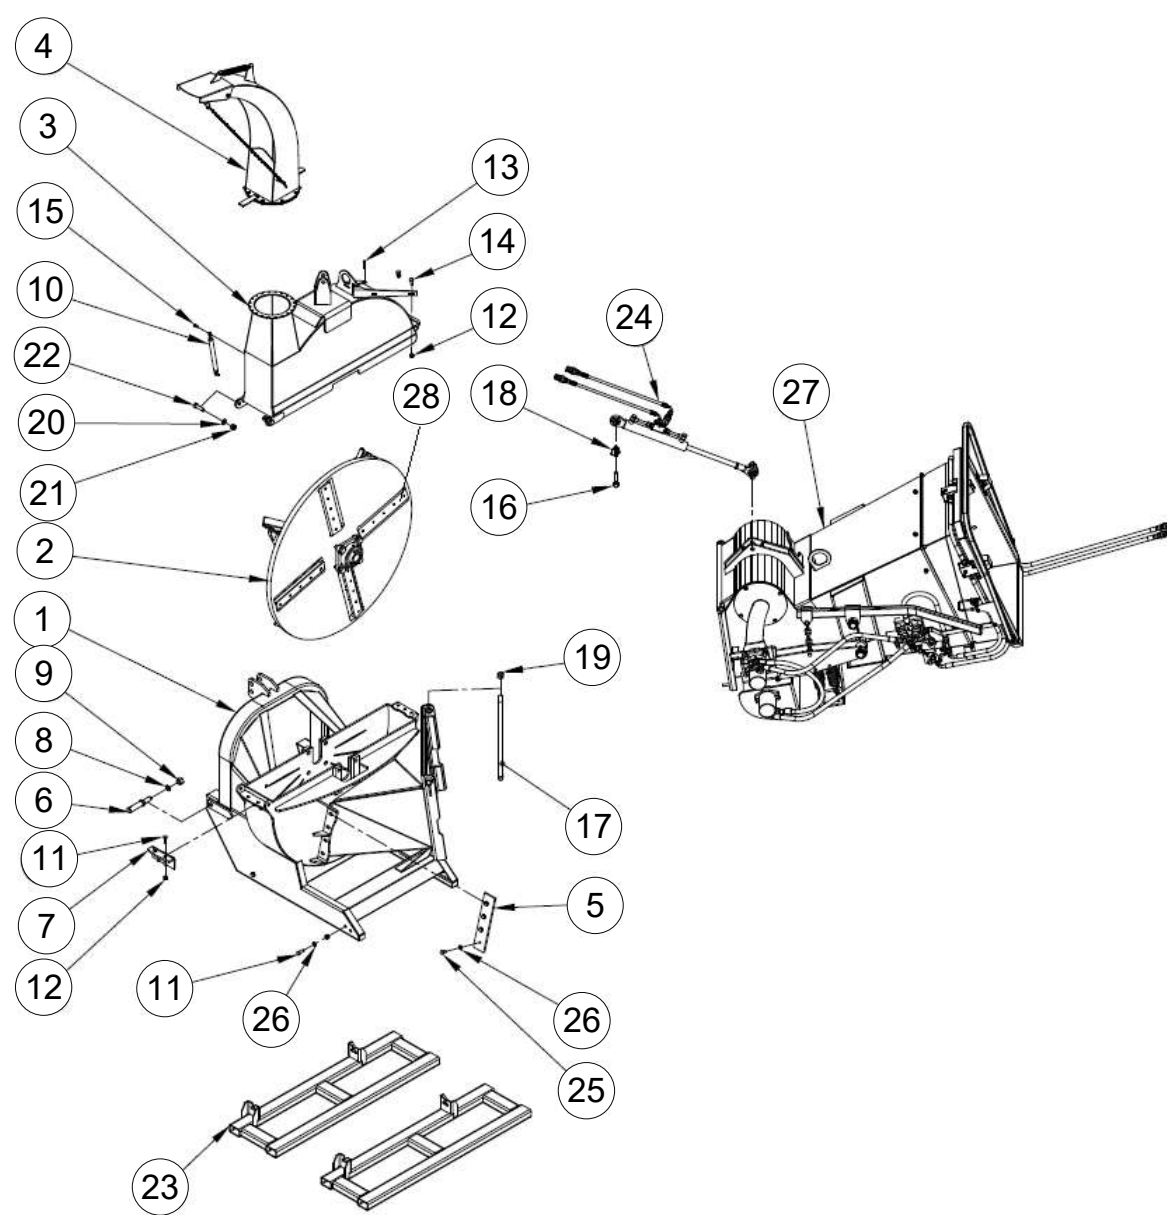


Pos	Code	Description	NOTE	Q.
1	BX122R.00.011	HOUSING-BOTTOM-WELDMENT		0
2	BX122R.00.002	ROTOR-ASSEMBLY		0
3	BX122R.00.013	HOUSING-TOP-WELDMENT		0
4	BX62R.20.001	DISCHARGE CHUTE-ASSEMBLY		0
5	BX122R.00.101	KNIFE-ANVIL		0
6	DW30.110	LOWER LINK BOLT		2
7	BX62R.11.014	BREAKER-WELDMENT		0
8	GB93-22	spring washer 22		2
9	GB6170-M22x1.5	Nut M22x1.5		2
10	BX122R.00.014	GAS SPRING		1
11	GB5783-M12x35	Bolt M12X35		6
12	GB889.1-M12	Locking nut M12		8
13	LP-5	Lock pin 5		1
14	GB5783-M12x30	Bolt M12X30		2
15	GB5783-M8x20	bolt M8X20		2
16	BX122R.00.103	HINGE PIN		2
17	BX122R.00.104	SHAFT		1
18	LP-11x45	LOCK PIN 11x45		2
19	M20-889.1	LOCK NUT M20		1
20	GB97.1-16	Plain washer 16		2
21	GB889.1-M16	Locking nut M16		2
22	GB5783-M16x55	Bolt M16x55		2
23	BX122R.00.016	BASE-WELDMENT		0
25	GB5786-M12x1.5x25	BOLT M12x1.5		4
26	GB97.1-12	plain washer 12		12

Pos	Code	Description	NOTE	Q.
28	BX122R.001.02	knife ECO 33		4

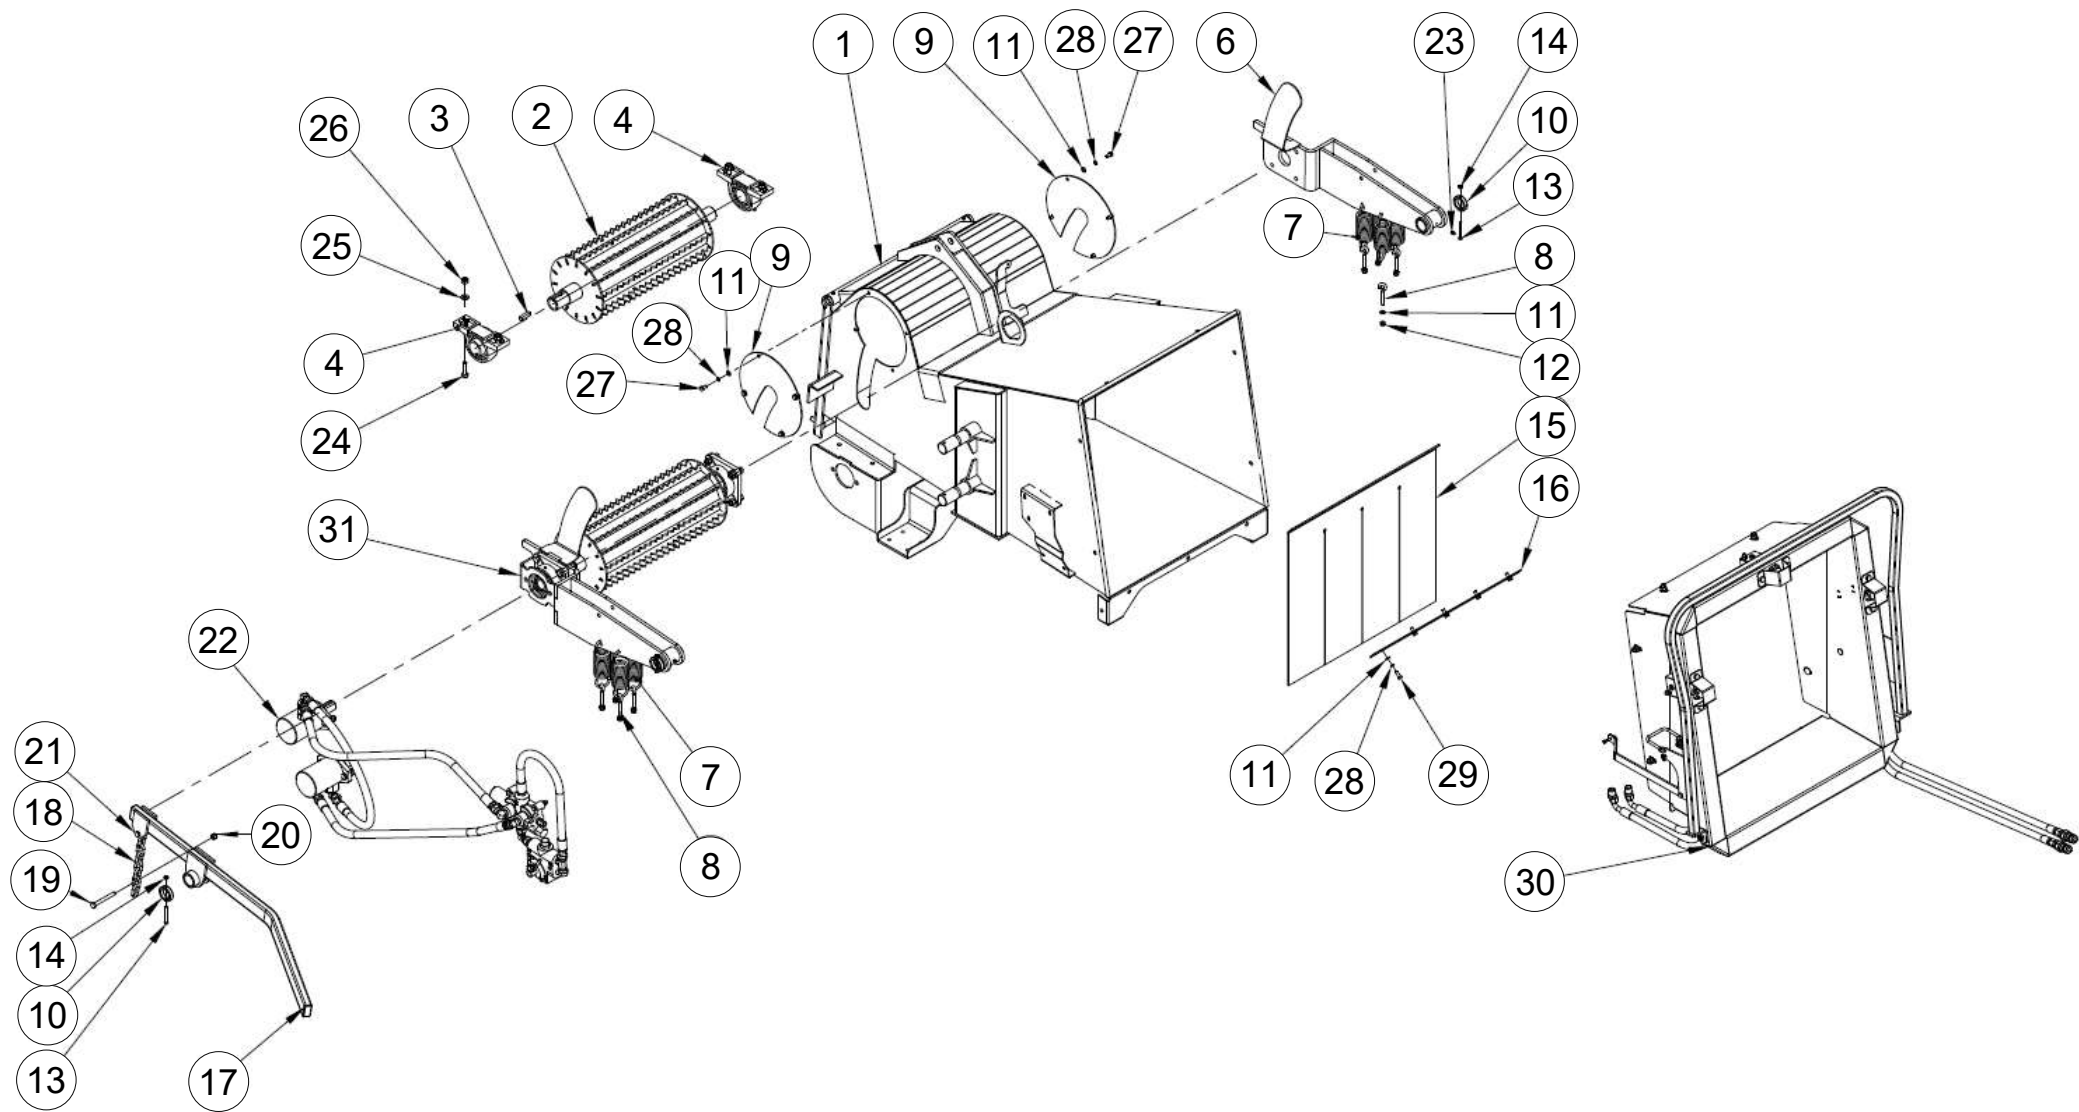


Pos	Code	Description	NOTE	Q.
1	BX122RA.10.011	FEED HOPPER-WELDMENT		0
2	BX122R.10.012	LOWER FEED ROLLER-WELDMENT		0
3	BX122R.10.110	KEY A10x10x45		1
4	GB7810-UCP209	BEARING UCP209		2
5	BX122R.10.002	UPPER FEED ROLLER-ASSEMBLY		0
6	BX122R.10.015-1	RIGHT ARM-WELDMENT		1
7	BX122R.10.103	TENSION SPRING		8
8	BX92R.10.101	HOOK SCREW		8
9	BX122R.10.101	COVER		2
10	BX92R.10.103	LOCKING SLEEVE		3
11	GB97.1-8	Plain washer 8		21
12	GB889.1-M8	Locking nut M8		8
13	GB5782-M6x60	Bolt M6x60		3
14	GB889.1-M6	Locking nut M6		3
15	BX122R.10.105	FLAP		1
16	BX122R.10.106	PRESSING PLATE		1
17	BX122R.10.017	LEVER-WELDMENT		0
18	BX122R.10.018	CHAIN		2
19	GB5782-M10x90	Bolt M10x90		1
20	GB889.1-M10	Locking nut M10		2
21	GB5782-M10x60	Bolt M10x60		1
23	GB1152-M6	Grease Nipple M6		3
24	GB5783-M12x45	Bolt M12X45		4
25	GB97.1-12	plain washer 12		4
26	GB889.1-M12	Locking nut M12		4


Pos	Code	Description	NOTE	Q.
27	M8x16	BOLT M8x16		8
28	GB93-8	Spring washer 8		13
29	GB5783-M8x20	bolt M8X20		5
31	BX122R.10.015-2	LEFT ARM-WELDMENT		1

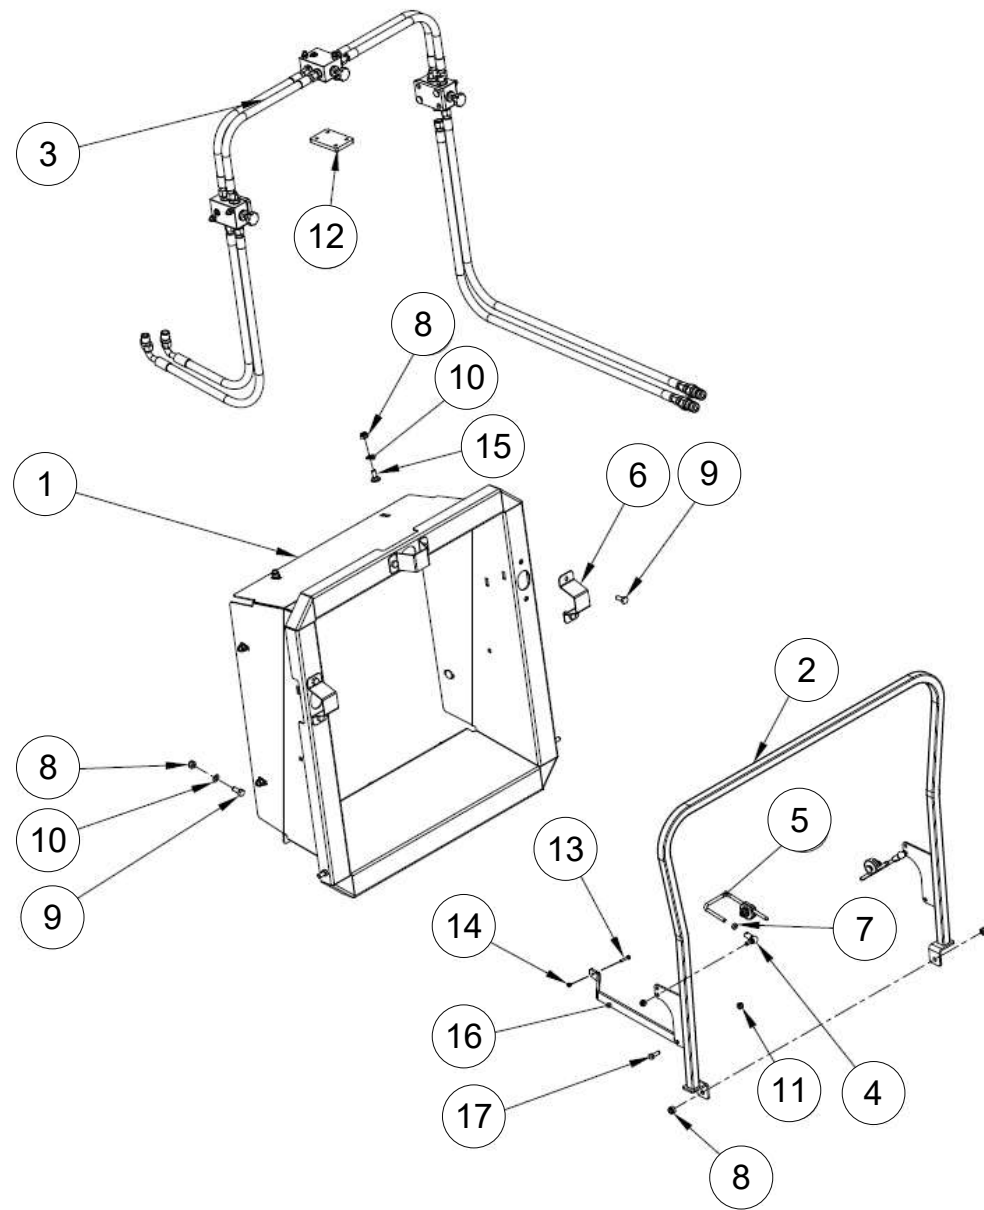


Pos	Code	Description	NOTE	Q.
1	BX122RA.10.041	ADDITIONAL HOPPER-WELDMENT		0
2	BX122RA.10.014	HANDLE-WELDMENT		0
4	CS-M8	ROD END BEARING M8		2
5	BX92RSA.10.015	CAPTURE-ASSEMBLY		1
6	BX92RSA.10.110	COVER-VALVE		1
7	GB6170-M8	Nut M8		2
8	GB889.1-M10	Locking nut M10		11
9	GB5783-M10x25	Bolt M10X25		9
10	GB97.1-10	PLAIN WASHER 10		9
11	GB889.1-M8	Locking nut M8		3
12	BX92RSA.10.120	PLATE		3
13	GB5782-M5×25	Bolt M5x25		1
14	GB889.1-M5	Locking nut M5		1
15	GB/T14-M10×25	SQUARE NECK BOLT M10x25		6
16	BX92RSA.10.114	LINK BAR		1
17	GB5783-M8x25	bolt M8X25		1

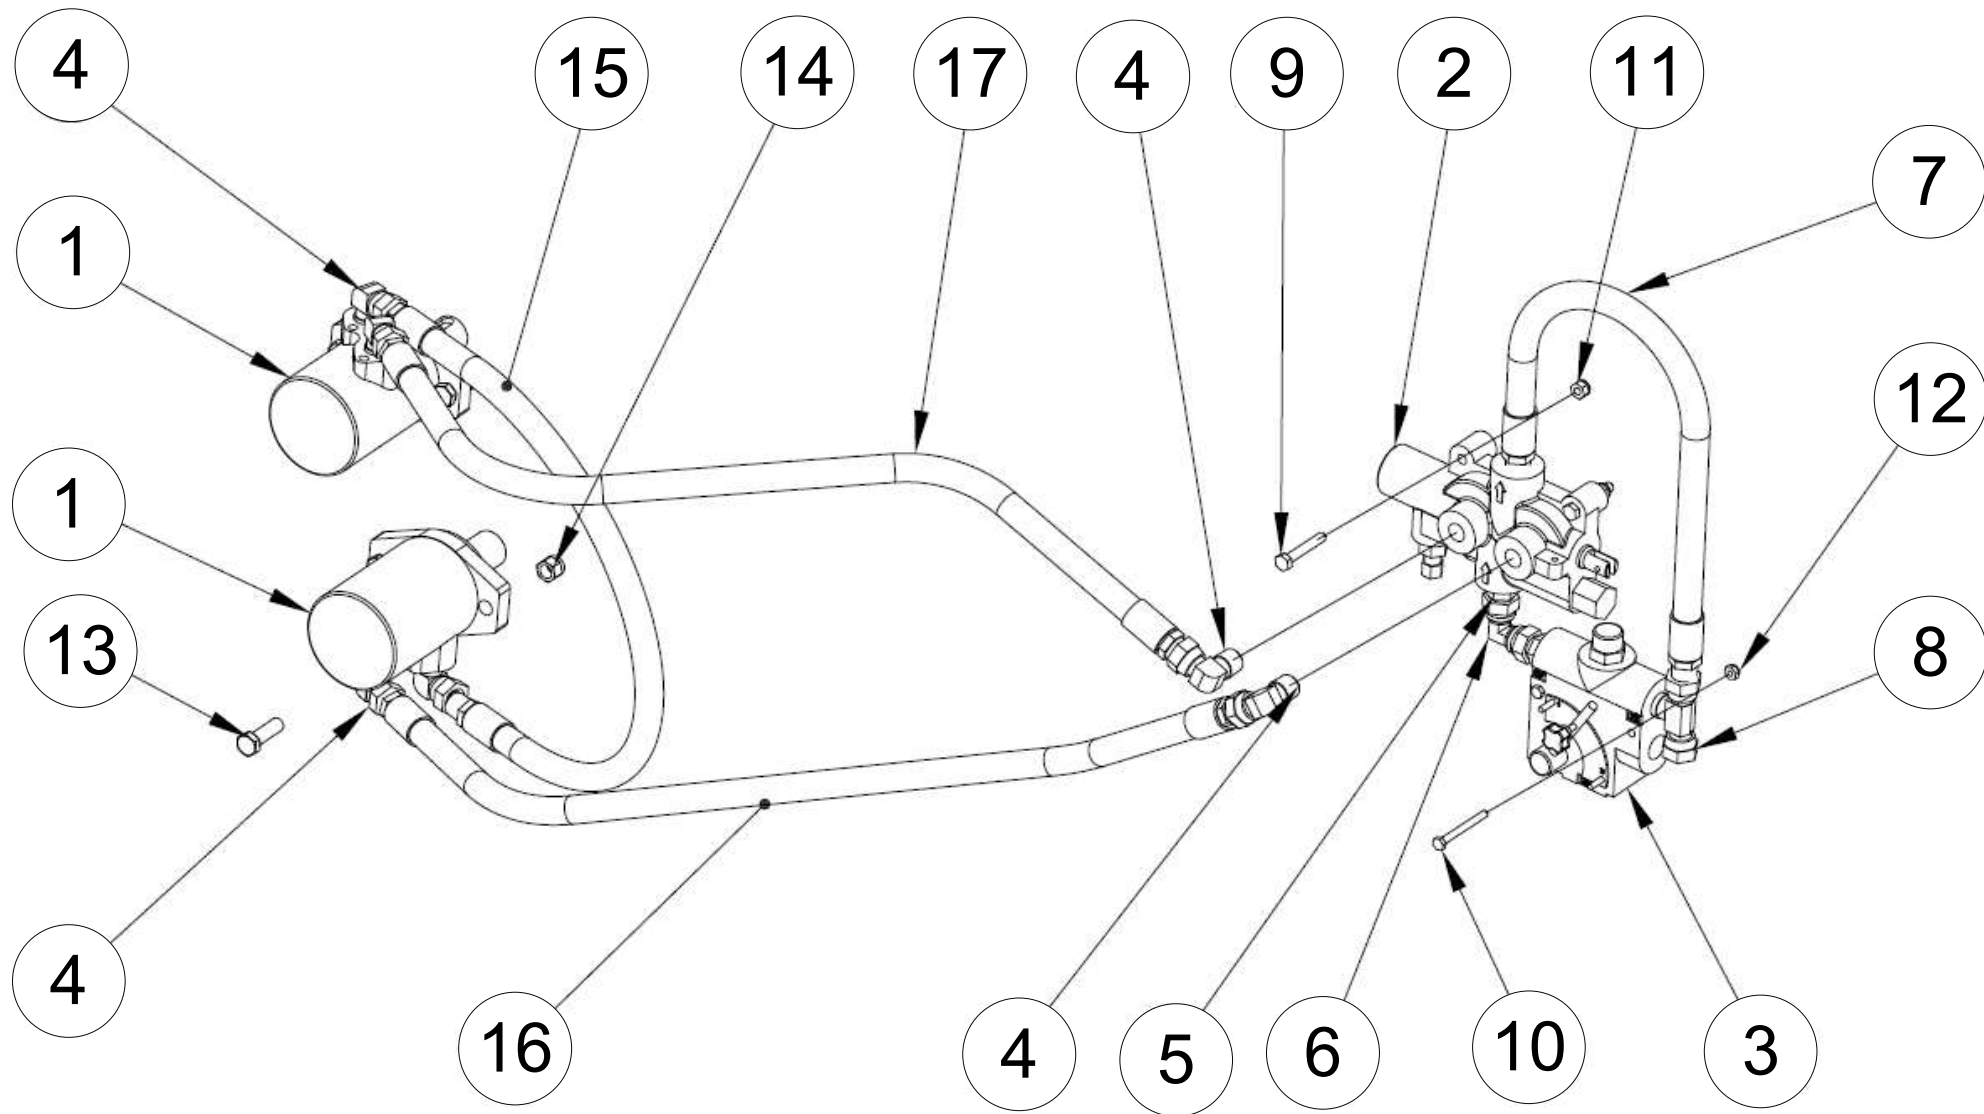

Pos	Code	Description	NOTE	Q.
1	BMP-315	Motor bmp-315		2
2	X-20-1	CONTROL VALVE X-20-1		1
3	RD1900-A	FLOW CONTROL VALVE RD1900		1
4	BX122R.30.102	ELBOW FITTING-SINGLE NUT		0
5	BX122R.30.101	STRAIGHT FITTING-SINGLE NUT		0
6	BX122R.30.104	ELBOW FITTING-DOUBLE NUT		0
7	BX122R.30.012	HOSE-VALVE-VALVE RETURN		0
8	BX122R.30.103	TEE JOINT		1
9	GB5782-M8x50	Bolt M8X50		3
10	GB5782-M6x60	Bolt M6x60		2
11	GB889.1-M8	Locking nut M8		3
12	GB889.1-M6	Locking nut M6		2
13	GB5783-86/M12x40	Bolt M12x40		4
14	GB/T889.1-M12	LOCK NUT M12		4
15	BX122R.30.015	HOSE-MOTOR-MOTOR		0
16	BX122R.30.013	HOSE-VALVE-MOTOR-LOWER		0
17	BX122R.30.014	HOSE-VALVE-MOTOR-UPPER		0

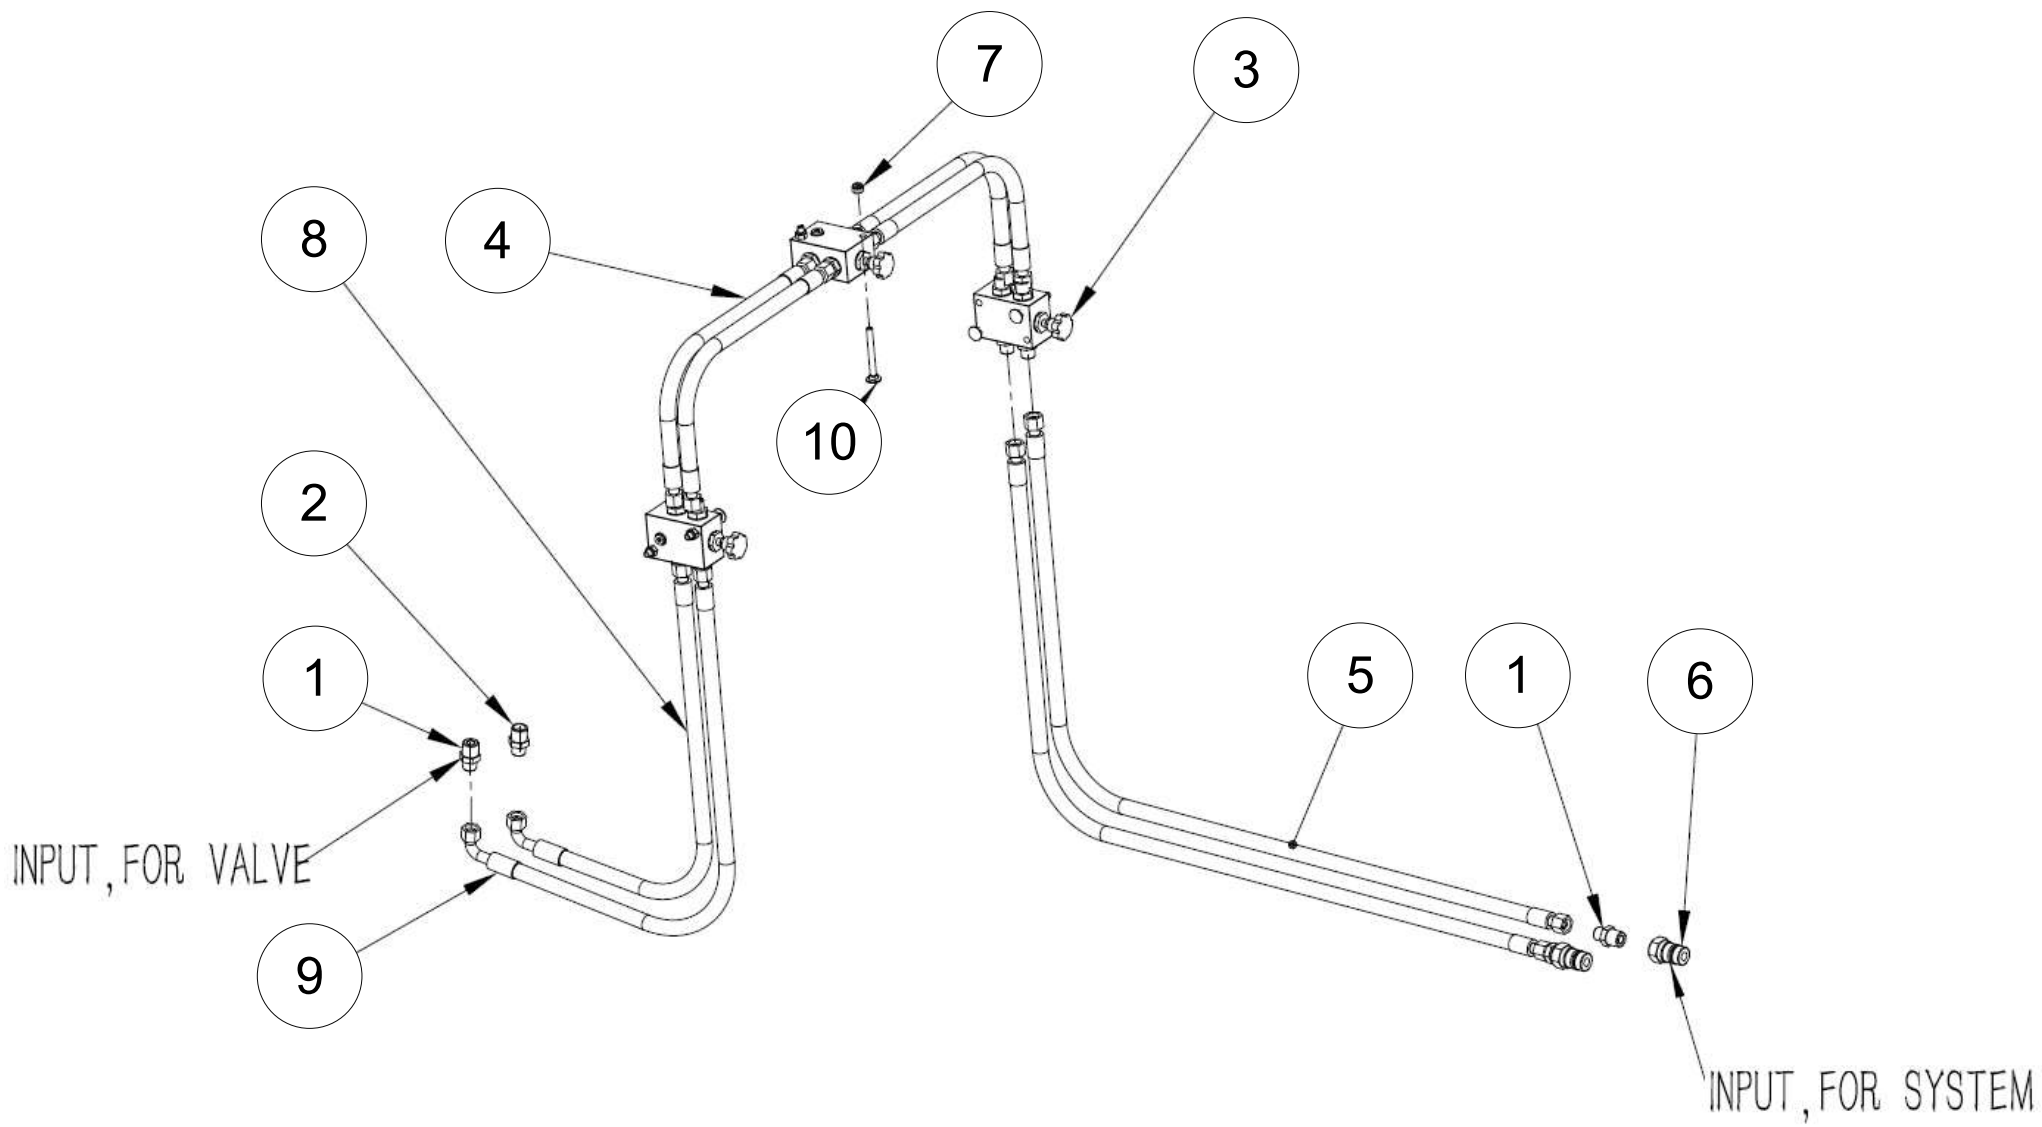

Pos	Code	Description	NOTE	Q.
1	BX92RSA.30.101	STRAIGHT FITTING		3
2	BX92RSA.30.102	STRAIGHT FITTING		1
3	SV-12/5	EMERGENCY STOP		3
4	BX122RA.30.015	HOSE		4
5	BX122RA.30.018	HOSE		2
6	KJ-R1-2-M	QUICK CONNECTER-MALE		0
7	GB889.1-M8	Locking nut M8		6
8	BX122RA.30.016	HOSE-OUTLET		0
9	BX122RA.30.017	HOSE-INLET		0
10	GB/T14-M8×75	SQUARE NECK BOLT M8x75		6

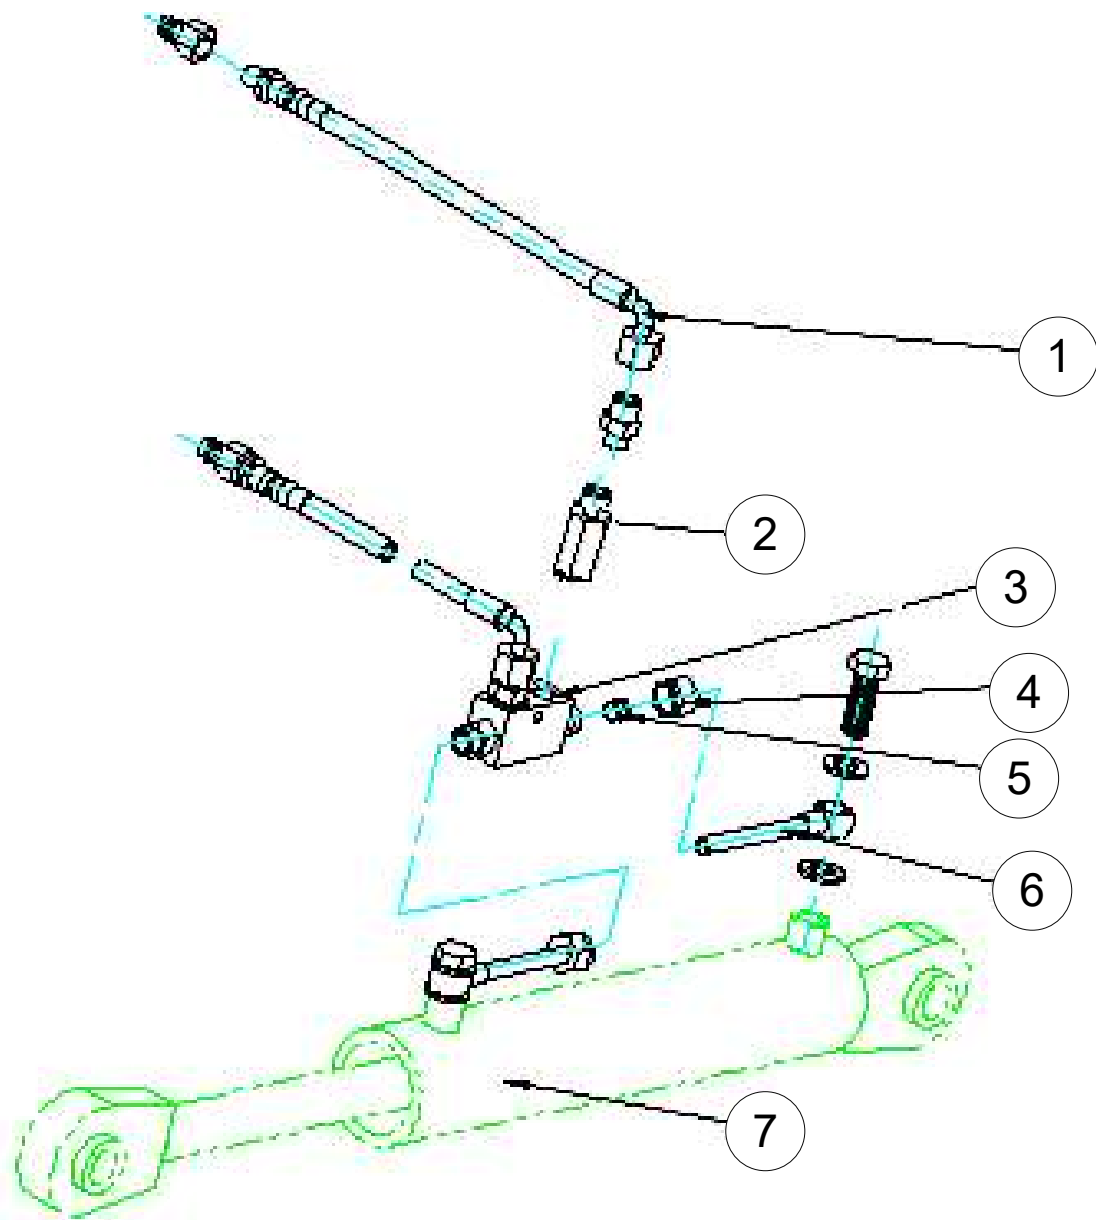

Pos	Code	Description	NOTE	Q.
1	AGF140.041	Oil pipe		2
2	MK6.M14X1.5	THROTTLE VALVE		1
3	AGF140.046	Valve		1
4	AGF140.403	Nut		1
5	AGF140.404	Bushing		1
6	AGF140.045	Adaptor weldment		1
7	BX122R.30.002	CYLINDER ECO33		1